

Remote Control Reference

- 1 The TIVO BUTTON takes you to the Home screen.
- 2 POWER button turns the TV on or off.
- 3 INPUT selects the input for your TV.
- 4 BACK goes back to the previous screen.
- 5 Use the ARROW BUTTONS to navigate the TiVo menus. When watching video, press OK to bring up TrickPlay controls, UP to see the mini guide and DOWN to see the full Info banner, Continue Watching panel, and Favorite Channels panel.
- 6 VOLUME controls the volume on your TV.
- 7 Press and release the Google Assistant buttont to talk to Google.
- 8 REPLAY repeats the last eight seconds of the show. In the Guide, REPLAY jumps 24 hours back.
- 9 Use the THUMBS UP and THUMBS DOWN confirm certain commands, as instructed on screen.
- 10 Future enhancements will include the use of the A, B, C, and D buttons. A opens the categories list in What to Watch. B changes the sort order of My Shows. C jumps to the next filter in My Shows. D removes a tile from the Continue Watching panel.
- 11 CLEAR dismisses items appearing over live TV and deletes titles from My Shows and the To Do List.
- 12 LIVE TV takes you to live TV.
- 13 "i" shows the Info banner while watching a show. Press and hold for accessibility options.
- 14 Use EXIT to go to full-screen video from any TiVo menu screen. While watching live TV or Start Over/Catch Up shows, EXIT goes back to the previous channel watched.
- 15 Use CHANNEL UP/DOWN to change the channel or move quickly through the Guide.
- 16 GUIDE takes you to the on-screen Guide.
- 17 Press RECORD to record the show you're watching, or to set up a recording for a show selected in the guide. (Cloud DVR required.)



